

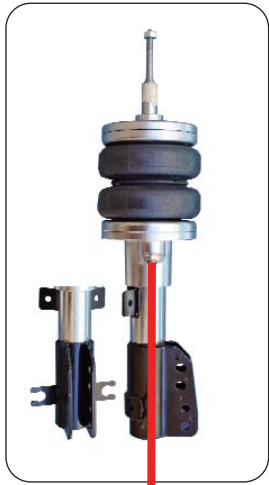
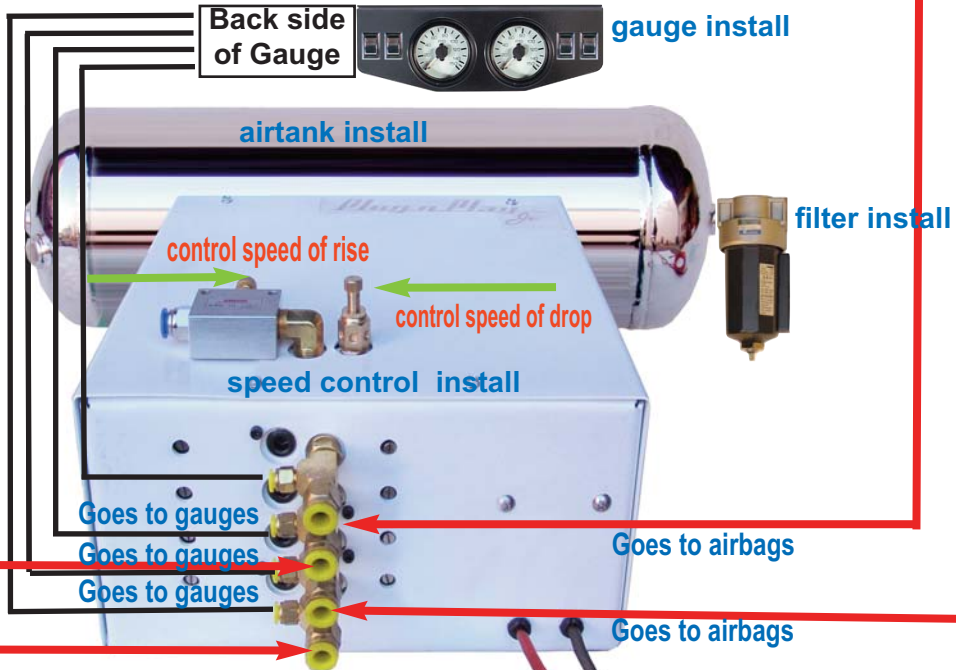


PLUG & PLAY

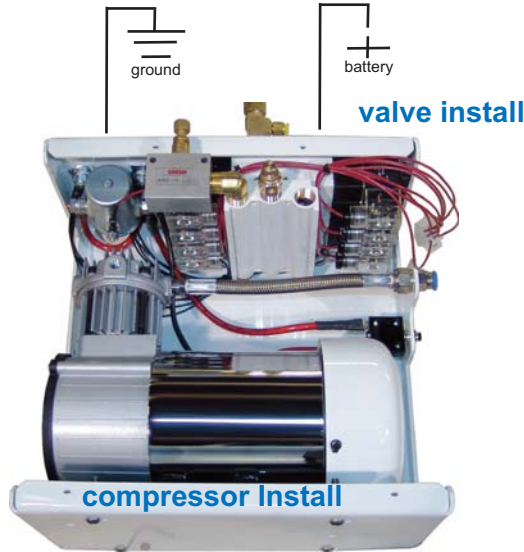

strut install

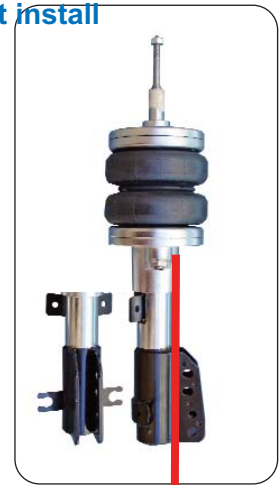

rear bag install



INSTALLATION

AIR MANAGEMENT This is a completely plumbed & wired Plug & Play. Just hook up the ground wire & battery wire, then run the airlines and plug them in to the previously installed fittings. The gauge is wired as well. Just determine where you want to put the airtank, and plug in airhose.

FRONT STRUTS Your struts will be *specific direct bolt-on* to your car, but may not look exactly like pictured above. Simply remove original struts, and reinstall Airstruits.

REAR BAGS & BRACKETS will replace your factory coilspring. On some kits we include an extra set of brackets so you can set up for a lower ride. Remove or trim bumpstops as necessary for travel. Tack-Weld bracket in place until you are sure of placement and you are satisfied with the ride height. Ride Height should be achieved with aprox 40-60psi on the rear. Too much pressure will provide a rough ride. Brackets will vary & may not look like the picture